


## I/Stat Operation Instructions

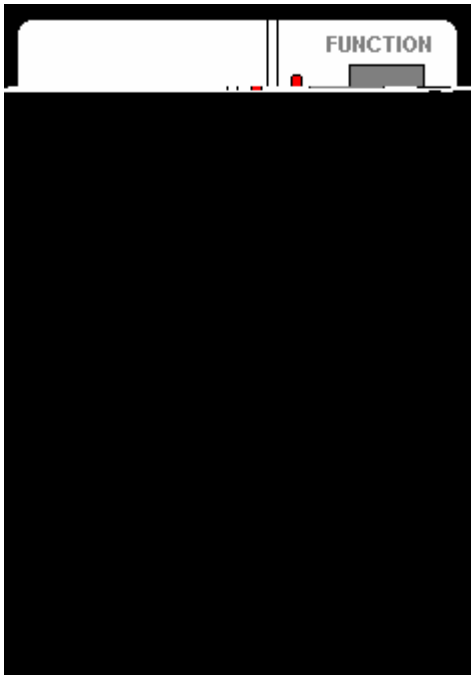

If light is out press the On/Off button once to turn on AC for 2 hours.

**ATTENTION: Unit must be in Occupied State to cool or heat the room to the desired “SET TEMP”**

Shown is an I/Stat in a normal operating condition while in an Occupied State. The red circle to the left of the “ON/OFF” button being lit indicates that the device is in an occupied state. The “72.5” displays the room temperature when the red circle beside “ROOM TEMP” is lit.

**Setpoint Adjustment:** In order to view and/or adjust the room temperature setpoint, press either the UP or Down “SELECT” button until the indicator beside “SET TEMP” is displayed. When the indicator is lit, the numeric display is now indicating the setpoint that the controller is currently trying to maintain. To adjust the room temperature setpoint press either the + or – “CHANGE” button to make adjustments to the setpoint. After a brief delay the display will return to showing the room temperature which is shown by the indicator being lit beside “ROOM TEMP”.

**After Hours Override:** In the event that you should be in an area in an unoccupied time period, there is an override function that will supply A/C for a pre-programmed time period. If the indicator to the left of the “ON/OFF” button is not lit the unit is in unoccupied mode. To override the system, press the “ON/OFF” button **ONCE**, within a few seconds the indicator should light up, indicating that the unit is now in the occupied mode. Pressing the “ON/OFF” button again will return the unit to an unoccupied mode, extinguishing the indicator. Overrides are generally set for 2 hours, if you need more, revisit the I/STAT to view whether the indicator is lit every 2 hours.